




 

 





















 



 



 




 

 






 



 

 

 

 





 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Source		AV
	-/--		Shift + Guide
	[i]/Info		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	[≡i]/Guide		Guide
	Menu		Menu
	Red		Red
	Exit		Exit
	Green		Green
	I-II		Dual
	Swap/P<P		Pre Ch
	Yellow		Yellow
	TV/DTV		TV/R
	<<		I<<





	Original	Replacement	Original	Replacement
	Blue	 D		Blue
	<<			<<
	Play	 PLAY MODE		Play
	>>			>>
	>>>			>>I
	Stop			Stop
	Pause/[+]			Pause
	Rec/PP	 REC MODE		Rec
	[≡+]	 SETTINGS OPT		Options
	[≡x]	 AD SUBT		Subt
	[.≡]	 APP MEDIA		Media
	[≡]	 REPEAT TEXT		Text
	[≡?]	 PICTURE FORMAT		Format
	[≡o]	 ECO 3D		3D

