 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 





 

 
 
 

 



 



 
 
 
 
 

 
 
 
 




 
 
 

 


| Original   | Replacement   |
|--|---|
|  Power      |  Power           |
|  Eject/Auto |  Eject           |
|  Mute       |  Mute            |
|  1          |  1               |
|  2          |  2               |
|  3          |  3               |
|  4          |  4               |
|  5          |  5               |
|  6          |  6               |
|  7          |  7               |
|  8         |  8              |
|  9        |  9             |
|  0        |  0             |
|  -/--     |  Shift + Guide |
|  Recall   |  Pre Ch        |
|  Vol+     |  Vol +         |
|  Vol-     |  Vol -         |

| Original   | Replacement  |
|--|--|
|  Aspect           |  Format           |
|  Audio            |  Dual             |
|  CH+              |  Ch +             |
|  CH-              |  Ch -             |
|  Display          |  Info             |
|  Up               |  Up               |
|  Right            |  Right            |
|  Down             |  Down             |
|  Left             |  Left             |
|  OK               |  Ok               |
|  LCD Menu        |  Menu            |
|  DVD Setup/Exit |  Exit           |
|  DVD Setup/Exit |  Options        |
|  Input          |  AV             |
|  P.Mode         |  Shift + Format |
|  S.Mode         |  Shift + Dual   |
|  Sleep          |  Sleep          |





| Original  | Replacement  |
|---|--|
|  FAV           |  Shift + Pre Ch |
|  FAV-          |  Shift + Ch -   |
|  FAV+          |  Shift + Ch +   |
|  EPG           |  Guide          |
|  Angle/Text    |  Text           |
|  Zoom/Hold     |  Shift + Eject  |
|  Tv/Radio      |  TV/R           |
|  Goto/Subpage  |  3D             |
|  D.Disp/Reveal |  List           |
|  Subtitle      |  Subt           |
|  Title/Size    |  Smart          |
|  D.Menu/Index |  D. Menu       |
|  I>/Media    |  Media        |
|  Play/Pause  |  Play         |
|  <<          |  <<           |
|  Play/Pause  |  Pause        |
|  >>          |  >>           |

| Original  | Replacement  |
|---|--|
|  Rec           |  Rec    |
|  Stop          |  Stop   |
|  I<<           |  I<<    |
|  >>I           |  >>I    |
|  Red/Prog      |  Red    |
|  Green/Intro   |  Green  |
|  Yellow/Repeat |  Yellow |
|  Blue/A-B      |  Blue   |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |

