



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/ATV	 Info / Angle
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Vol+	 Vol+
 MTS	 Setup / OPT /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 RecList	 Smart / List
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Original		Replacement	
DISPLAY	Display	MEDIA DISPLAY	Display / Media
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random
GUIDE	<<	TUNE-	<< / Tune-
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
TIMESHIFT	Play	SLOW	Play / Slow
TIMESHIFT	Pause/TimeShift	SHIFT + STEP-FREEZE	Shift + Pause / Step /
ASPECT	>>Aspect	TUNE+	>> / Tune+
CANCEL	I<</Cancel	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear
CANCEL	I<</Cancel	PRESET-	I<< / Preset-
SUB.PG	>>I/Sub.PG	PRESET+	>>I / Preset+
INDEX	Stop/Index	HOLD	Stop / Hold
TVRADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
REVEAL	Reveal	TOP MENU D.MENU	D.Menu / Top

Original		Replacement	
SIZE	Size	SIZE ZOOM	Zoom / Size
HOLD	Hold	SHIFT + HOLD	Shift + Stop /
TEXT	Text	GOTO TEXT	Text / Goto

