 

 

 


 
 

 

 
 


 


 
 

 
 

 

 

 
 

 





 

 
 

 








Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Input	 AV / Input / RDS	 P+	 CH+ / Page+
 TV/DVD	 TV/Radio /	 [i+]	 Info / Angle
 DTV/ATV	 Smart / List	 0	 0
 EPG	 Guide / EPG / -/--	 Recall	 Fav / Marker / PC
 [<>]	 Picture / Format	 P-	 CH- / Page-
 Mute	 Mute / Dimmer	 Red/ << Skip	 Red / Netflix / Search
 1	 1	 Green/<< Rev	 Green / APP / Repeat
 2	 2	 Yellow/>>FWD	 Yellow / YouTube / Repeat
 3	 3	 Blue/>> Skip	 Blue / Prime Video / Random
 Vol+	 Vol+	 Pause	 Pause / Step / Freeze
 4	 4	 Play	 Play / Slow
 5	 5	 Stop	 Stop / Hold
 6	 6	 Setup/Tv Menu	 Setup / OPT /
 Vol-	 Vol-	 DVD Menu	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Left/< Slow	 Left





Original	Replacement	Original	Replacement
 OK	 OK		
 Right/I> Slow	 Right		
 Return	 Back / Return		
 Down	 Down		
 Top Menu	 D.Menu / Top		
 Cancel	 Exit / Cancel / Clear		
 [...]	 Subtitle / EQ		
 [≡◆]/Audio	 Audio / Lang I/II		
 Play Mode	 Display / Media		
 [≡]/Text	 Text / Goto		
 [≡?]/Angle	 Shift + Info / Angle		
 [≡○]/Zoom	 Zoom / Size		
 [≡+] Sleep / Timer			

