

































 



 

 









Original	Replacement
 Standby	 Power
 Lock	 Green / APP / Repeat
 Menu	 Home / Menu
 Timer On/Off	 Sleep / Timer
 Audio Out	 Mute / Dimmer
 Skip Search	 Red / Netflix / Search
 Zero Back	 Back / Return
 Clear	 Exit / Cancel / Clear
 Up	 Up
 Set	 OK
 SV/V+/Timer/Showview	 Picture / Format
 Down	 Down
 Right	 Right
 Left	 Left
 Display	 Display / Media
 1	 1
 Mode OSD	 Info / Angle

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input Select	 AV / Input / RDS
 <<	 << / Tune-
 Play	 Play / Slow
 -/--/AM/PM	 Guide / EPG / -/--
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Channel+	 CH+ / Page+
 Channel-	 CH- / Page-




Original
Replacement

	Stop		Stop / Hold
	Slow	 + 	Shift + Play /
	Pause/Still		Pause / Step / Freeze
	Tape/Speed	 REPEAT A-B	Yellow / YouTube / Repeat
	< DPSS/-		l<< / Preset-
	DPSS >/+		>>l / Preset+
	TV/VCR		Smart / List
	Tv Operate	 + 	Shift + Power
	Tv Input Select	 + 	Shift + AV / Input / RDS
	Tv CH+	 + 	Shift + CH+ /
	Tv CH-	 + 	Shift + CH- /
	Tv Vol-		Vol-
	Tv Vol+		Vol+

Original
Replacement

