



Original	Replacement	Original	Replacement
 Operate	 Power	 Show View	 Info / Angle
 Open / Close	 Eject / Surround	 TV / DVD	 TV/Radio /
 1	 1	 Timer On / Off	 Sleep / Timer
 2	 2	 Time Shift	 Text / Goto
 3	 3	 Dubbing	 Vol-
 CH +	 CH+ / Page+	 P in P	 Picture / Format
 4	 4	 Input	 AV / Input / RDS
 5	 5	 HDD	 Shift + 7
 6	 6	 Start Menu	 Menu / Home
 CH -	 CH- / Page-	 DVD	 Shift + 2
 7	 7	 Rec List / DVD Top Menu	 Smart / List
 8	 8	 Up	 Up
 9	 9	 Original / Playlist / DVD Menu	 D.Menu / Top
 Direct	 Setup / OPT /	 Left	 Left
 -/--	 Guide / EPG / -/--	 Set / Enter	 OK
 0	 0	 Right	 Right
 C / Erase	 Shift + Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear





Original	Replacement
	Down
	Back / Return
	Blue / Prime Video / Random
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	<< / Tune-
	Play / Slow
	>> / Tune+
	Pause / Step / Freeze
	Stop / Hold
	Shift + Play /
	I<< / Preset-
	>>I / Preset+
	Sound / Title
	Shift + Red / Netflix /
	Zoom / Size

Original	Replacement
	Shift + Info / Angle
	Audio / Lang I/II
	Subtitle / EQ
	Rec / Rec Mode
	Shift + Stop /
	Shift + Pause / Step /
	Shift + Rec / Rec Mode
	Shift + Eject / Surround
	Fav / Marker / PC
	Vol+
	Display / Media

