








 
 
 








 

 





 
 







Original	Replacement
	Power
	Sleep
	Screen
	Presets
	TV/Radio /
	FAV
	Lang
	Subtitle
	TXT
	1
	2
	3
	4
	5
	6
	7
	8

Original	Replacement
	9
	EPG
	0
	Swap
	Photo/Music/Movi
	World
	Source
	Menu
	Up
	Left
	OK
	Right
	Down
	C
	Disp.
	Search Mode
	Return





The image shows a black Mandis Shop remote control. At the top, there is a red power button, a 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons labeled 'TV', 'DVD', 'SAT', and 'AUX'. The main body of the remote contains a grid of buttons for various functions: 'SLOW', 'STEP - FREEZE', 'HOLD', 'REC MODE', 'TUNE-', 'TUNE+', 'PRESET-', 'PRESET+', 'TITLE', 'LANG UI', 'EQ', 'SURROUND', 'SOUND', 'AUDIO', 'SUBTITLE', 'FORMAT', 'SIZE', 'TIMER', 'PROGRAM', 'PICTURE', 'ZOOM', 'SLEEP', 'TOP MENU', 'OPT-TOOLS', 'GOTO', 'RDS', 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. In the center is a directional pad with 'OK' in the middle. To the left of the pad are 'CLEAR', 'EXIT', and 'CANCEL' buttons, and to the right are 'RETURN' and 'BACK' buttons. Below the directional pad are 'LIST', 'SMART', 'MEDIA', and 'DISPLAY' buttons. On the far left is a large volume control button with a '+' sign and 'VOL' text, and on the far right is a large channel/page control button with a '+' sign and 'CH PAGE' text. The bottom section features a numeric keypad (0-9) with additional labels like 'VIDEO', 'TAPE', 'TUNER', 'AUX - HDD', 'USB', 'BLUETOOTH', 'HDMI - SAT', 'PC', 'GUIDE', 'EPO', and 'FAV MARKER'. At the very bottom, there are four colored buttons: 'NETFLIX' (red), 'APP' (green), 'YouTube' (yellow), and 'Prime Video' (blue). Below these are four more buttons: 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM'. The Mandis Shop logo and website 'www.mandis.tv' are printed at the bottom.