



Original	Replacement	Original	Replacement
Standby	Power	0	0
Open/Close	Eject / Surround	Title	Sound / Title
Audio	Audio / Lang I/II	Up	Up
1	1	Menu	Menu / Home
2	2	Left	Left
3	3	OK	OK
Angle	Info / Angle	Right	Right
4	4	Display	Display / Media
5	5	Down	Down
6	6	Video Out	AV / Input / RDS
Subtitle	Subtitle / EQ	Return	Back / Return
7	7	Setup	Setup / OPT /
8	8	Mode	D.Menu / Top
9	9	Vol+	Vol+
Search	Red / Netflix / Search	Mute	Mute / Dimmer
PRG	TV/Radio /	Mark	Fav / Marker / PC
CLR	Exit / Cancel / Clear	Zoom	Zoom / Size





Original	Replacement	Original	Replacement
Vol-	Vol-		
A-B	Yellow / YouTube / Repeat		
SlowR	CH- / Page-		
SlowF	CH+ / Page+		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Stop	Stop / Hold		
Pause/Step	Pause / Step / Freeze		
Play	Play / Slow		

Original	Replacement

