 





 

 



 

 

 

 
 
 
 






 





 










 




Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 [...]	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Sync Menu	 D.Menu / Top
 Related Search	 Shift + Red / Netflix /
 Tv Pause	 Shift + Pause / Step /
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Title List	 Shift + Smart / List
 Title List	 Sound / Title
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Social View	 Sleep / Timer
 Football	 Zoom / Size
 Discover	 Display / Media
 SEN/APPS	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right
 Return/Back	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Digital/Analog	 Picture / Format
 Exit	 Exit / Cancel / Clear





Original	Replacement
[i+]/[?]	Info / Angle
?/i-Manual	+ Shift + Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/Radio	TV/Radio /
0	0
[=]	Text / Goto
Vol+	Vol+
Prog+	CH+ / Page+
Mute	Mute / Dimmer

Original	Replacement
3D	+ Shift + 3
Vol-	Vol-
Prog-	CH- / Page-

