











 







 
 









 




 




 



 

 



 



 



 
























Original	Replacement	Original	Replacement
 Standby	 Power	 I<<	 I<<
 Mute	 Mute	 >>I	 >>I
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 Stop	 Stop
 4	 4	 Live TV	 TV/R
 5	 5	 RECD TV	 Smart
 6	 6	 Music	 Dual
 7	 7	 Pictures	 Format
 8	 8	 Vaio	 Media
 9	 9	 CD/DVD	 AV
 0	 0	 Menu	 Menu
 Recall	 Back	 Tools	 Options
 Rec	 Rec	 Controls	 Guide
 Rec Stop	 Shift + Stop	 Up	 Up
 <<	 <<	 Down	 Down
 >>	 >>	 Right	 Right





Original	Replacement	Original	Replacement
 Left	 Left		
 Enter	 Ok		
 Prog+	 Ch +		
 Prog-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		

