



Original	Replacement	Original	Replacement
	Power		Power
	Night Mode		Rec
	Tuner Menu		Menu
	Dynamic Bass		List
	Sleep		Sleep
	Sound Field-		Ch -
	Sound Field+		Ch +
	Muting		Mute
	DVD Menu		D. Menu
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
>10 button icon"/>	>10		Guide
	Function		Smart
	Display		Info
	DVD Setup		Options
	Subtitle		Subt
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Tv/Video		TV/R












 
	Original	Replacement		Original	Replacement
	Dimmer	 PICTURE FORMAT	Format		
	Pause		Pause		
	Play/Select	 PLAY MODE	Play		
	Stop		Stop		
	<</Tuning-/<l		<<		
	Tuning+/Slow		>>		
	>> /Preset+		>>		
	<</Preset-		<<		
	Audio	 SOUND DUAL	Dual		
	Repeat	 REPEAT TEXT	Text		
	DVD Display	 APP MEDIA	Media		
	Enter	 FAV PRE-CH	Pre Ch		
	DVD Top Menu	 SHIFT + TOP MENU MENU	Shift + Menu		
	Band	 ECO 3D	3D		
	Angle	 B	Green		
	Play Mode	 SHIFT + PLAY MODE PLAY	Shift + Play		

Original	Replacement





Original	Replacement
 Power Tv	 Power
 Tv/Video	 TV/R
 Muting	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10/0	 0
 >10	 Guide
 Function	 Smart
 Band	 3D
 Enter	 Pre Ch

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 Tv CH+	 Ch +
 Tv CH-	 Ch -
 Display	 Info

