


 

 












 



 



 




 



 

 
 
 









 

 









 




 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Subtitle	 Subt
 Open/Close	 Eject	 Angle	 Red
 1	 1	 Sur	 Options
 2	 2	 Search Mode	 AV
 3	 3	 Repeat	 Shift + Text
 4	 4	 A-B	 Shift + Play
 5	 5	 Shuffle	 Yellow
 6	 6	 SA-CD	 Smart
 7	 7	 Album+	 Ch +
 8	 8	 Album-	 Ch -
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Picture Navi	 TV/R
 Clear	 Exit	 Next	 TV/R
 Enter	 Pre Ch	 Prev	 TV/R
 Time/Text	 Text	 Scan >>/Slow	 TV/R
 Picture Mode	 Format	 Scan << Scan/<I	 TV/R
 Audio	 Dual	 Scan << Scan/<I	 TV/R
		 Instant Replay/<I Step	 Shift + I<<












 
 












 

 


 

 
 
Original	Replacement
 Step II>/Instant Advance/→	 Shift + >>I
 Play	 Play
 Pause	 Pause
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Display	 Info
 Menu	 Menu
 Top Menu	 Shift + Menu
 Return	 Back
 Stop	 Stop
 SA-CD/CD	 Media

Original	Replacement







Original	Replacement	Original	Replacement
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Enter	 Ok		
 Tv/Video	 TV/R		
 Vol+	 Vol +		
 Vol-	 Vol -		

