
 
 




 






 


 







Original	Replacement	Original	Replacement
 Power	 Power	 Display/Tools	 Setup / OPT /
 Muting	 Mute / Dimmer	 One -Touch Play	 Text / Goto
 Play	 Play / Slow	 Menu/DVD	 Menu / Home
 Pause	 Pause / Step / Freeze	 Theatre	 TV/Radio /
 Stop	 Stop / Hold	 Up	 Up
 <<	 << / Tune-	 Angle	 Info / Angle
 >>	 >> / Tune+	 Left	 Left
 I<</Preset-	 I<< / Preset-	 OK	 OK
 >>I/Preset+	 >>I / Preset+	 Right	 Right
 Sound Mode	 Sound / Title	 Clear	 Exit / Cancel / Clear
 Audio	 Audio / Lang I/II	 Down	 Down
 Subtitle/D.Tuning	 Subtitle / EQ	 Return	 Back / Return
 Picture Navi	 Picture / Format	 Volume+	 Vol+
 S-Air Mode	 Zoom / Size	 Dynamic Bass	 Smart / List
 Sleep	 Sleep / Timer	 Function+	 CH+ / Page+
 Tv Input	 AV / Input / RDS	 Volume-	 Vol-
 System	 D.Menu / Top	 Display	 Display / Media

Menu/Enter

Menu







Original	Replacement
Power	Power
Tv Vol+	Vol+
Tv Input	AV / Input / RDS
Tv Vol-	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Guide / EPG / -/--
0	0
Enter	Fav / Marker / PC
Menu	Menu / Home

Original	Replacement
Muting	Mute / Dimmer
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Tools	Setup / OPT /
Prog-	CH- / Page-
Prog+	CH+ / Page+

