



| Original | Replacement |
|---------------|-------------------|
| Eject/Thrater | Fav / Marker / PC |
| Input Tv | AV / Input / RDS |
| Power Tv | + Shift + Power |
| Power | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Vol+ | Vol+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Vol- | Vol- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Timer | Sleep / Timer |
| Audio | Audio / Lang I/II |

| Original | Replacement |
|-------------|-----------------------------|
| 0 | 0 |
| Subtitle | Subtitle / EQ |
| Angle | Info / Angle |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| Top Menu | D.Menu / Top |
| Up | Up |
| Pop Up Menu | Menu / Home |
| Left | Left |
| OK | OK |
| Right | Right |
| Return | Back / Return |
| Down | Down |
| Option | Setup / OPT / |
| Home/Player | + Shift + Display / Media |



