

 


Original	Replacement
Input	AV / Input / RDS
Wide	Picture / Format
Power	Power
Theater	TV/Radio /
<</<II/<I	<< / Tune-
Play	Play / Slow
I>/II>/>>	>> / Tune+
Sync Menu	Shift + Display / Media
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
i-Manual	Text / Goto
Scene	Shift + Fav / Marker / PC
Top Menu	D.Menu / Top
Menu BD/DVD	Shift + D.Menu / Top Menu
CC/Subtitle	Subtitle / EQ
Internet Widgets	Shift + Smart / List

Original	Replacement
Internet Video	Eject / Surround
Qriocity	Audio / Lang I/II
Favorites	Fav / Marker / PC
Guide	Guide / EPG / -/--
Up	Up
Display	Display / Media
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Red	Red / Netflix / Search
Green	Green / APP / Repeat



 








	Original	Replacement	Original	Replacement
	1	 1		 Zoom / Size
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 Smart / List		
	ENT	 0		
	Vol+	 Exit / Cancel / Clear		
	CH+	 Vol+		
	Muting	 CH+ / Page+		
	Vol-	 Mute / Dimmer		
	CH-	 Vol-		
		 CH- / Page-		





 

 





 



 







 





 



 
 


 

 



 



 







 









 



 






 


 

 












 


 



 

 





 




 
 

Original	Replacement
 Input	 AV / Input / RDS
 Power	 Power
 <</< <	 << / Tune-
 Play	 Play / Slow
 > > >>	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu BD/DVD	 Picture / Format
 Favorites	 Fav / Marker / PC
 Guide	 Guide / EPG / -/--
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





 



 

 

 







 



 

 
 
 



 







 





 







 

 



Original	Replacement	Original	Replacement
 Input	 AV / Input / RDS	 5	 5
 Power	 Power	 6	 6
 Menu BD/DVD	 D.Menu / Top	 7	 7
 Favorites	 Fav / Marker / PC	 8	 8
 Guide	 Guide / EPG / -/--	 9	 9
 Up	 Up	 .	 Smart / List
 Display	 Display / Media	 0	 0
 Left	 Left	 ENT	 Exit / Cancel / Clear
 OK	 OK	 Vol+	 Vol+
 Right	 Right	 CH+	 CH+ / Page+
 Return	 Back / Return	 Muting	 Mute / Dimmer
 Down	 Down	 Vol-	 Vol-
 Home/Menu	 Menu / Home	 CH-	 CH- / Page-
 1	 1	 Jump	 Picture / Format
 2	 2		
 3	 3		
 4	 4		

 5	 5	 TAPES	 5
 6	 6	 TUNER	 6
 7	 7	 AUX - HDD	 7
 8	 8	 USB	 8
 9	 9	 BLUETOOTH	 9
 .	 Smart / List	 HOME	 ANGLE
 0	 0	 HDMI - SAT	 INFO
 ENT	 Exit / Cancel / Clear	 MENU	 RETURN
 Vol+	 Vol+	 OK	 BACK
 CH+	 CH+ / Page+	 CLEAR	 EXIT
 Muting	 Mute / Dimmer	 CANCEL	 LIST
 Vol-	 Vol-	 VOL +	 SMART
 CH-	 CH- / Page-	 MEDIA	 DISPLAY
 Jump	 Picture / Format	 CH PAGE	 TV
		 VOL -	 DVD
		 CH PAGE	 CD - STB
		 TV	 VIDEO
		 DVD	TUNER
		CD - STB	AUX - HDD
		VIDEO	USB
		TUNER	BLUETOOTH
		AUX - HDD	PC
		USB	FAV MARKER
		BLUETOOTH	GUIDE EPG
		PC	NETFLIX
		FAV MARKER	APP
		GUIDE EPG	YouTube
		NETFLIX	Prime Video
		APP	SEARCH
		YouTube	REPEAT
		Prime Video	REPEAT A-B
		SEARCH	RANDOM
		REPEAT	
		REPEAT A-B	
		RANDOM	





Original	Replacement
 Input	 AV / Input / RDS
 Power	 Power
 <</<I/<II	 << / Tune-
 II>/I/>>>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Menu BD/DVD	 D.Menu / Top
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Home/Menu	 Menu / Home
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Exit / Cancel / Clear
 Vol+	 Vol+
 Muting	 Mute / Dimmer
 Vol-	 Vol-

