



| Original | Replacement |
|---|---|
|  Power |  Power |
|  Eject |  Eject / Surround |
|  Tv/Radio |  TV/Radio / |
|  Red/Goto |  Red / Netflix / Search |
|  Green/Angle |  Green / APP / Repeat |
|  Yellow/Repeat |  Yellow / YouTube / Repeat |
|  Blue/A-B |  Blue / Prime Video / Random |
|  FAV |  Fav / Marker / PC |
|  Text |  Text / Goto |
|  Hold/Freeze |  Shift + Stop / |
|  D.Menu/Guide |  D.Menu / Top |
|  Subtitle |  Subtitle / EQ |
|  Zoom/Size |  Zoom / Size |
|  Aspect |  Shift + Picture / Format |
|  Subpage |  Smart / List |
|  Media |  Shift + Display / Media |
|  Pause |  Pause / Step / Freeze |

| Original | Replacement |
|---|---|
|  Play |  Play / Slow |
|  << / Tune- |  << / Tune- |
|  >> / Tune+ |  >> / Tune+ |
|  D.Setup |  Setup / OPT / |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  I<< / Preset- |  I<< / Preset- |
|  I>> / Preset+ |  I>> / Preset+ |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Lang/Audio |  Audio / Lang I/II |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Sleep |  Sleep / Timer |
|  Down |  Down |
|  Title/Exit |  Exit / Cancel / Clear |





| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

