




































Original	Replacement
 Standby	 Power
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Aspect	 Shift + Picture / Format
 0	 0
 Recall/+10	 Fav / Marker / PC
 TVG	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II

Original	Replacement
 Display	 Display / Media
 Tv/Radio	 TV/Radio /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 FAV	 Shift + Fav / Marker / PC
 Vol+	 Vol+
 Rec	 Rec / Rec Mode
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Source	 AV / Input / RDS





	Original	Replacement		Original	Replacement
	P.Mode	Picture / Format		Green/Angle	Green / APP / Repeat
	S.Mode	Sound / Title		Yellow/Repeat	Yellow / YouTube / Repeat
	Sleep	Sleep / Timer		Blue/A-B	Blue / Prime Video / Random
	Title/Text	Text / Goto			
	D.Menu/Hold	D.Menu / Top			
	D.Setup/Reveal	Setup / OPT /			
	Subpage	Smart / List			
	Play	Play / Slow			
	Pause/Timeshift	Pause / Step / Freeze			
	Stop	Stop / Hold			
	Index	Info / Angle			
	Zoom/Size	Zoom / Size			
	<<	<< / Tune-			
	>>	>> / Tune+			
	<<	<< / Preset-			
	>>	>> / Preset+			
	Red/Goto	Red / Netflix / Search			

