

 







 



 

 



 



 

 
 



 
 

 

 



 











 

 

 



 

 



 





| Original | Replacement |
|--|---|
|  Standby |  Power |
|  Open/close |  Eject / Surround |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Subtitle |  Subtitle / EQ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Angle |  Shift + Info / Angle |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Language |  Audio / Lang I/II |
|  0 |  0 |
|  +10 |  Guide / EPG / -/- |
|  Video |  Shift + 4 |

| Original | Replacement |
|--|--|
|  Program |  TV/Radio / |
|  Mute |  Mute / Dimmer |
|  N/P |  AV / Input / RDS |
|  Time |  Sleep / Timer |
|  OSD |  Display / Media |
|  Setup |  Setup / OPT / |
|  Up |  Up |
|  Title |  Sound / Title |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |
|  Down |  Down |
|  Return |  Back / Return |
|  USB/Card |  Smart / List |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |





| Original | | Replacement | | Original | Replacement |
|---|----------|---|---------------------------|----------|-------------|
|  | Pause |  | Pause / Step / Freeze | | |
|  | << |  | << / Tune- | | |
|  | >> |  | >> / Tune+ | | |
|  | I<< |  | I<< / Preset- | | |
|  | >>I |  | >>I / Preset+ | | |
|  | A-B |  | Yellow / YouTube / Repeat | | |
|  | Repeat |  | Green / APP / Repeat | | |
|  | L/R |  | Red / Netflix / Search | | |
|  | Slow |  | Shift + Play / | | |
|  | Vol+ |  | Vol+ | | |
|  | Echo+ |  | CH+ / Page+ | | |
|  | Mic Vol+ |  | Shift + CH+ / | | |
|  | Mic |  | Info / Angle | | |
|  | Vol- |  | Vol- | | |
|  | Echo- |  | CH- / Page- | | |
|  | Mic Vol- |  | Shift + CH- / | | |
|  | Zoom |  | Zoom / Size | | |

