






























 


























 

 

 









Original	Replacement	Original	Replacement
	Power		Power
	Sub-T		Subtitle / EQ
	Lang		Audio / Lang I/II
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/--
	Goto		Shift + Text /
	Page+		CH+ / Page+
	TTX		Text / Goto
	Repeat		Shift + Green / APP /
	Page-		CH- / Page-
	Menu		Menu / Home
	Up/CH+		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	FAV		Fav / Marker / PC
	Down		Down
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Info		Info / Angle
	7		7
	8		8
	9		9
	0		0
	<<		<< / Tune-



