
 

 

 



 
 


 


 



 

 




 



 


 


 









Original	Replacement	Original	Replacement
 Power	 Power	 Display	 Info
 Mute	 Mute	 Sleep	 Sleep
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 FAV/List	 Shift + Pre Ch
 6	 6	 Clock	 Shift + AV
 7	 7	 List	 List
 8	 8	 Tv/Radio	 TV/R
 9	 9	 Aspect	 Format
 0	 0	 Freeze	 Pause
 -/--	 GUIDE	 Index	 Options
 Recall	 PRE-CH	 Cancel	 Back
 Menu	 MENU	 Subpage	 Subt
 Source	 AV	 Text	 Text
 Exit	 EXIT	 Size	 Eject





Original		Replacement		Original	Replacement
	Reveal		Media		
	Hold		Dual		
	Mix		Shift + Media		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Cyan		Blue		
	Nicam		Smart		
	P.Mode		Shift + Format		
	S.Mode		Shift + Dual		
	OK		Ok		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		

