



 

 

 
 


 

 








 














Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Shift + Pre Ch
	Recall		Pre Ch
	Audio		Dual
	Imagen		Format
	Fuente		AV

Original	Replacement	Original	Replacement
	Info		Info
	Sleep		Sleep
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Guia		Guide
	Sonido		Options
	USB		Media
	Aspecto		3D
	Congelar		Smart
	Menu		Menu
	Salir		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right



