

 

 

 



 

 

 

 

 



 

 

 







 

 

 



 



 

 

 



 

 







 







Original		Replacement		Original		Replacement	
	Power		Power		1		1
	Mute		Mute / Dimmer		2		2
	PG+		CH+ / Page+		3		3
	DTV/VCR		Smart / List		Epg		Guide / EPG / -/-
	Vol+		Vol+		4		4
	PG-		CH- / Page-		5		5
	Info		Info / Angle		6		6
	Vol-		Vol-		Recall		Back / Return
	Menu		Menu / Home		7		7
	Up/Ch+		Up		8		8
	Exit		Exit / Cancel / Clear		9		9
	Left		Left		0		0
	Ok		OK		Audio		Audio / Lang I/II
	Right		Right		Tv/Radio		TV/Radio /
	Record		Rec / Rec Mode		Fav		Fav / Marker / PC
	Down/Ch-		Down		File		Display / Media
	Times Shift		Sleep / Timer		Text		Text / Goto





Original	Replacement	Original	Replacement
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Stop		Stop / Hold
	Green		Green / APP / Repeat
	Step	 + 	Shift + Pause / Step / Freeze
	Yellow		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Blue		Blue / Prime Video / Random
	Play		Play / Slow

