




Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 R/L	 Blue / Prime Video / Random
 0	 0

Original	Replacement
 10+	 Guide / EPG / -/--
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Clear	 Exit / Cancel / Clear
 Prog	 TV/Radio /
 Time	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Title	 Sound / Title
 Menu	 Menu / Home
 Default	 AV / Input / RDS
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze


























 





























Original	Replacement	Original	Replacement
	 I<< / Preset-		
	 >> / Tune+		
	 Stop / Hold		
	 >> / Preset+		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Zoom / Size		
	 D.Menu / Top		
	 Shift + Pause / Step /		
	 Shift + Play /		
	 Vol+		
	 Smart / List		
	 Picture / Format		
	 Back / Return		
	 Vol-		





Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+

Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
C/CH	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Pbc	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Resume	 Smart / List
Slow Up	 CH+ / Page+









































Original	Replacement	Replacement
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
R/L		Fav / Marker / PC
Search		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

Original	Replacement	Replacement
Rep/A-B		Yellow / YouTube / Repeat
Shuffle		Blue / Prime Video / Random
Karaoke/Step	+	Shift + Pause / Step /
Echo+	+	Shift + Up
Echo-	+	Shift + Down
3D	+	Shift + 3
Video	+	Shift + 4





Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+

Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+





Original	Replacement	Original	Replacement
Volume-	VOL - [VOL -]	Vol-	
Display	MEDIA DISPLAY [DISPLAY]	Display / Media	
Slow Down	CH PAGE - [CH PAGE -]	CH- / Page-	
1	TV 1 [1]	1	
2	DVD 2 [2]	2	
3	CD - STB 3 [3]	3	
4	VIDEO 4 [4]	4	
5	TAPE 5 [5]	5	
6	TUNER 6 [6]	6	
7	AUX - HDD 7 [7]	7	
8	USB 8 [8]	8	
9	BLUETOOTH 9 [9]	9	
+10	GUIDE EPG [GUIDE EPG]	Guide / EPG / -/--	
0	HDMI - BAT 0 [0]	0	
C/CH	PC FAV MARKER [PC FAV MARKER]	Fav / Marker / PC	
Np	NETFLIX SEARCH [NETFLIX SEARCH]	Red / Netflix / Search	
Repeat/1/All	APP REPEAT [APP REPEAT]	Green / APP / Repeat	
		Rep/A-B	Yellow / YouTube / Repeat [REPEAT A-B]
		R/L	Blue / Prime Video / Random [RANDOM]

