











	Original	Replacement		Original	Replacement
	1	1		Left / Vol-	Left
	2	2		Left / Vol-	Vol-
	3	3		OK	OK
	Power	Power		Right / Vol+	Right
	4	4		Right / Vol+	Vol+
	5	5		Mute	Mute / Dimmer
	6	6		Menu / Setup	Menu / Home
	TV/R	TV/ Radio /		Menu / Setup	Setup / OPT /
	7	7		Down / CH-	Down
	8	8		Down / CH-	CH- / Page-
	9	9		Audio1 -	<< / Tune-
	EPG	Guide / EPG / -/--		Audio1 +	>> / Tune+
	0	0		Set / Info	Info / Angle
	Up / CH+	Up		Next / ESC	Exit / Cancel / Clear
	Up / CH+	CH+ / Page+		Audio2 -	I<< / Preset-
	A/D	Sound / Title		Audio2 +	>>I / Preset+
	(<>) L	Audio / Lang I/II		Down	Smart / List





Original	Replacement	Original	Replacement
 Stop / Recall	 Stop / Hold		
 Stop / Recall	 Back / Return		
 A/B / ADR	 Yellow / YouTube / Repeat		
 Memo	 Fav / Marker / PC		

