



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Info	Info / Angle
FAV	Fav / Marker / PC
Page+	Shift + CH+ /
Page-	Shift + CH- /
Audio	Audio / Lang I/II

Original	Replacement
Digest	Setup / OPT /
Menu	Menu / Home
EPG	Guide / EPG / -/-
Exit	Exit / Cancel / Clear
Play	Play / Slow
Zoom	Zoom / Size
Pause	Pause / Step / Freeze
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
UP	Up
DOWN	Down
RIGHT	Right
LEFT	Left
OK	OK
CH+	CH+ / Page+





Original		Replacement	
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	TV/Radio		TV/Radio /
	Teletext		Text / Goto
	Subtitle		Subtitle / EQ
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement

