



Original	Replacement
Power	Power
Green / Prog.	Green / APP / Repeat
Green / Prog.	TV/Radio /
Yellow / Status	Yellow / YouTube / Repeat
Yellow / Status	Info / Angle
Blue / Guide	Blue / Prime Video / Random
Blue / Guide	Guide / EPG / -/--
Red / Dec.	Red / Netflix / Search
Up	Up
Purple / Text	Display / Media
Purple / Text	Text / Goto
Exit	Exit / Cancel / Clear
Left / I<<	Left
Left / I<<	I<< / Preset-
OK	OK
Right / >>I	Right
Right / >>I	>>I / Preset+

Original	Replacement
Menu	Menu / Home
Vol+	Vol+
Down	Down
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
1	1
2	2
3	3
Index / Mark	Fav / Marker / PC
4	4
5	5
6	6
0000	Shift + Exit / Cancel / Clear
7	7
8	8





	Original	Replacement	Original	Replacement
	9	9		
	SP / LP	Smart / List		
	AV	AV / Input / RDS		
	0 / --	0		
	<< REW.	<< / Tune-		
	Play	Play / Slow		
	>> F.FWD	>> / Tune+		
	Rec.	Rec / Rec Mode		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		





Original	Replacement
Power	Power
Green / Prog.	Green / APP / Repeat
Green / Prog.	TV/Radio /
Yellow / Status	Info / Angle
Yellow / Status	Yellow / YouTube / Repeat
Blue / Guide	Blue / Prime Video / Random
Blue / Guide	Guide / EPG / -/--
Red / Dec.	Red / Netflix / Search
Up	Up
Purple / Text	Display / Media
Purple / Text	Text / Goto
Exit	Exit / Cancel / Clear
Left / I<<	I<< / Preset-
Left / I<<	Left
OK	OK
Right / >>I	Right
Right / >>I	>>I / Preset+

Original	Replacement
Menu	Menu / Home
Vol+	Vol+
Down	Down
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
1	1
2	2
3	3
Index / Mark	Fav / Marker / PC
4	4
5	5
6	6
0000	Shift + Exit / Cancel / Clear
7	7
8	8





Original	Replacement
 9	 9
 SP / LP	 Smart / List
 AV	 AV / Input / RDS
 0 / --	 0
 << REW.	 << / Tune-
 Play	 Play / Slow
 >> F.FWD	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Original	Replacement

