 










 
 
 

 

 

 




 

Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Audio/Audio/Lang/ MTS		Audio / Lang I/II
	Exit/Exit		Exit / Cancel / Clear

Original	Replacement	Original	Replacement
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	LCD Menu		Shift + D.Menu / Top Menu
	Down		Down
	DVB Menu		D.Menu / Top
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Info/Display		Info / Angle
	Zoom/P.Ratio		Zoom / Size
	Tv/Radio		TV/Radio /





Original	Replacement
 FAV	 Fav / Marker / PC
 TTX	 Text / Goto
 Pause/Hold/Cancel	 Pause / Step / Freeze
 Cancel/USB/Card	 Shift + Exit / Cancel / Clear
 EPG/List	 Shift + Guide / EPG / -/-
 Stop/Index/Stop	 Stop / Hold
 Size	 Shift + Zoom /
 Play/Play	 Play / Slow
 Reveal/Reveal	 Setup / OPT /
 Subtitle/Sub.PG	 Subtitle / EQ
 <</FR	 << / Tune-
 Red	 Red / Netflix / Search
 >>/FF	 >> / Tune+
 Green	 Green / APP / Repeat
 I<</Prev	 I<< / Preset-
 Yellow	 Yellow / YouTube / Repeat
 >>I/Next	 >>I / Preset+

Original	Replacement
 Blue	 Blue / Prime Video / Random

