 

 

 




 
 
 
 

 
 
 

 
 
 

 

 
 
 
 
 









Original	Replacement
 Power	 Power
 3D	 3D
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Eco	 Shift + 3D
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Info	 Info
 Option	 Options
 Smart TV	 Smart
 Guide	 Guide
 Menu	 Menu
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 @/Home	 Media
 Zoom-	 Shift + Ch -





Original	Replacement
Zoom+	Shift + Ch +
Sleep	Sleep
PRE-CH	Pre Ch
FAV	Shift + Pre Ch
List	List
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
OO Lang	Dual
Subtitle	Subt
Text	Text
I<	I<<
Stop	Stop
Play	Play
Pause	Pause
>I button"/> >I	>>I

Original	Replacement
<<	<<
Rec	Rec
>>	>>

