



Original		Replacement		Original		Replacement	
	Timer On/Sleep		Sleep		Intro/PTY		Ok
	FM Mode/Play		TV/R		I<<</>>>/Tuning		I<<<
	Clock/Timer		AV		>>>/>>>I/Tuning		>>I
	Function		Menu		MP3 Folder/Preset Down		Ch -
	1		1		MP3 Folder/Preset Up		Ch +
	2		2		Stop/Band		Stop
	3		3		Play		Play
	4		4		Pause		Pause
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Muting		Mute
	8		8		Standby/On		Power
	9		9				
	0		0				
	Digit		Pre Ch				
	Memory/Time		Smart				
	MP3/RDS		Media				

