








 



 








Original		Replacement		Original		Replacement	
	Power		Power		P+		Ch +
	1		1		P-		Ch -
	2		2		Home		Smart
	3		3		G		Guide
	4		4		i		Info
	5		5		Back		Back
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Lang		Dual		OK		Ok
	TXT		Text		Netflix		Media
	Vol+		Vol +		YouTube		Shift + Media
	Vol-		Vol -		*1		Format
	Mute		Mute		Prime Video		Shift + Smart
	Source		AV		Red		Red





	Original	Replacement		Original	Replacement
	Green	 B	Green		
	Yellow	 C	Yellow		
	Blue	 D	Blue		
	<<		<<		
	Pause		Pause		
	>>		>>		
	Rec	 REC MODE	Rec		
	Play	 PLAY MODE	Play		
	Stop		Stop		

