






 









 





 








 






 

 










 
 

 

 

 

 

 








Original	Replacement	Original	Replacement
	Power		Power
	FL Display		Smart
	TUNER BAND		Green
	AUX		Red
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Disc Skip		Sleep
	SFC		Eject
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Subwoofer		Shift + 4
	Action		Options
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Marker		3D
	CH Select		Shift + Media
















 



 









 




 



Original	Replacement
Test	+ Shift + 6
Mix 2CH	+ Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10 / Enter	GUIDE Guide
Disc	FAV Pre Ch
Seat Position	+ Shift + 1
Center Focus	SEARCH TV/R
Super Surround	+ Shift + 3

Original	Replacement
Pro Logic	+ Shift + 5
Disc Manager	LIST List
Play Mode	+ Shift + Play
Cancel	CLEAR Exit
Repeat	REPEAT Text
A-B Repeat	+ Shift + Text
Cinema	APP Media
Timer	TIMER AV









 






























Original	Replacement	Original	Replacement
 Power	 Power		
 TV Vol-	 Vol -		
 TV Vol+	 Vol +		
 TV / Video	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10	 Guide		





	Original	Replacement		Original	Replacement
	Power		Power		Play
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	≥10		Guide		
	CH+		Ch +		
	CH-		Ch -		
	Stop		Stop		
	<<		<<		
	>>		>>		

