












Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 OPT	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 TV / Radio	 TV/Radio /
 Menu	 Menu / Home
 Prog+	 CH+ / Page+
 Prog-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Sleep	 Sleep / Timer





Original	Replacement	Original	Replacement
 TXT	 Text / Goto		
 Still	 Pause / Step / Freeze		
 Sound	 Sound / Title		

Original	Replacement

