

 
 















Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	AV Set		AV / Input / RDS		Left		Left
	Menu		Menu / Home		OK		OK
	Mute		Mute / Dimmer		Right		Right
	Red/Timer		Red / Netflix / Search		Back		Back / Return
	Green/Sub		Green / APP / Repeat		Down		Down
	Yellow/Audio		Yellow / YouTube / Repeat		Info		Info / Angle
	Blue/TXT		Blue / Prime Video / Random		Vol+		Vol+
	<<		<< / Tune-		Google		Shift + Red / Netflix /
	Play		Play / Slow		P+		CH+ / Page+
	Pause		Pause / Step / Freeze		Vol-		Vol-
	>>		>> / Tune+		DTV		Fav / Marker / PC
	Stop		Stop / Hold		P-		CH- / Page-
	YouTube		Shift + Yellow / YouTube /		1		1
	prime video		Shift + Blue / Prime		2		2
	Home		Shift + Menu /		3		3
	APPS		Shift + Green / APP / Repeat		4		4





	Original	Replacement		Original	Replacement
	<b>5</b>	5	<b>TAPE</b> <b>5</b>		5
	<b>6</b>	6	<b>TUNER</b> <b>6</b>		6
	<b>7</b>	7	<b>AUX - HDD</b> <b>7</b>		7
	<b>8</b>	8	<b>USB</b> <b>8</b>		8
	<b>9</b>	9	<b>BLUETOOTH</b> <b>9</b>		9
	<b>EPG</b>	EPG	<b>GUIDE EPG</b>		Guide / EPG / -/--
	<b>0</b>	0	<b>HDMI - BAT</b> <b>0</b>		0
	<b>TV/RADIO</b>	Tv/Radio	<b>PROGRAM TV/RADIO</b>		TV/Radio /

