



Original	Replacement	Original	Replacement
 Digital	 Audio / Lang I/II	 Menu	 Menu / Home
 Power	 Power	 Up	 Up
 Analog	 Sound / Title	 Left / Zoom -	 Left
 Presets	 Display / Media	 OK	 OK
 1	 1	 Right / Zoom +	 Right
 2	 2	 Down	 Down
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Return	 Back / Return
 5	 5	 Info	 Info / Angle
 6	 6	 Vol +	 Vol+
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 PR + / >>I	 CH+ / Page+
 9	 9	 >>I	 >>I / Preset+
 AV	 AV / Input / RDS	 Vol -	 Vol-
 0	 0	 Text	 Text / Goto
 List	 Smart / List	 PR - / I<<<	 CH- / Page-
 Exit	 Exit / Cancel / Clear	 I<<<	 I<<< / Preset-







Original	Replacement	Original	Replacement
 Digital	 Audio / Lang I/II	 Menu	 Menu / Home
 Power	 Power	 Up	 Up
 Analog	 Sound / Title	 Left / Zoom -	 Left
 Presets	 Display / Media	 OK	 OK
 1	 1	 Right / Zoom +	 Right
 2	 2	 Down	 Down
 3	 3	 Guide	 Guide / EPG / -/--
 4	 4	 Return	 Back / Return
 5	 5	 Info	 Info / Angle
 6	 6	 Vol +	 Vol+
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 PR + / >>I	 >>I / Preset+
 9	 9	 PR + / >>I	 CH+ / Page+
 AV	 AV / Input / RDS	 Vol -	 Vol-
 0	 0	 Text	 Text / Goto
 List	 Smart / List	 PR - / I<<<	 CH- / Page-
 Exit	 Exit / Cancel / Clear	 PR - / I<<<	 I<<< / Preset-



