


Original	Replacement
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Return	Back / Return
PR+	CH+ / Page+
>>	>>  / Preset+
<<	<< / Preset-
PR-	CH- / Page-
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Red	Red / Netflix / Search


Original	Replacement
Sound	Sound / Title
Green	Green / APP / Repeat
List	Shift + Smart / Smart / List
Yellow	Yellow / YouTube / Repeat
Info	Info / Angle
Mosaic	Smart / List
Blue	Blue / Prime Video / Random
Violet	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

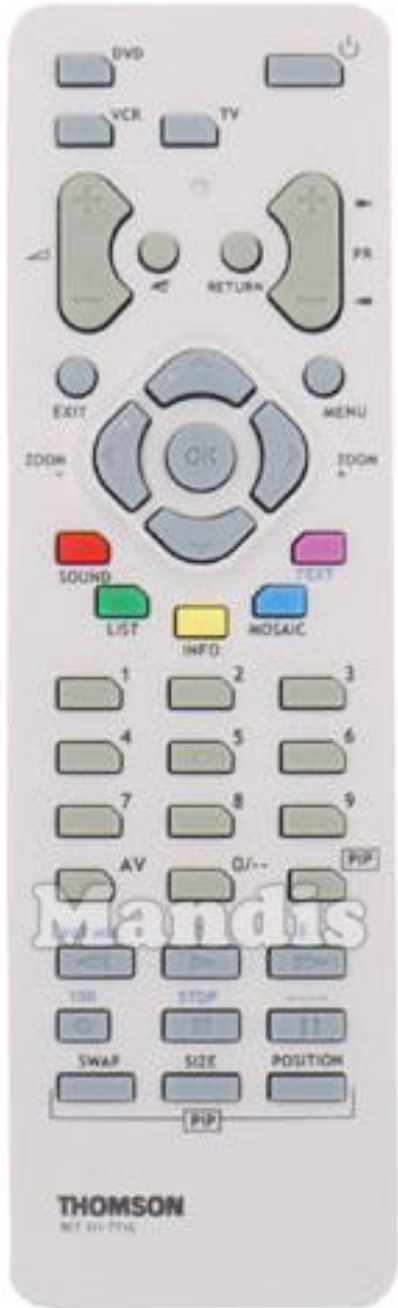



Original		Replacement		Original		Replacement	
	9		9				
	0/-/--		0				
	AV		AV / Input / RDS				
	PIP		Zoom / Size				
<</Pat-Mix button"/>	<</Pat-Mix		<< / Tune-				
	Play/?		Play / Slow				
	>>		>> / Tune+				
	Rec/100		Rec / Rec Mode				
	Stop		Stop / Hold				
	Pause/---		Pause / Step / Freeze				
	Swap PIP		Setup / OPT /				
	Size PIP		Picture / Format				
	Position PIP		TV/Radio /				




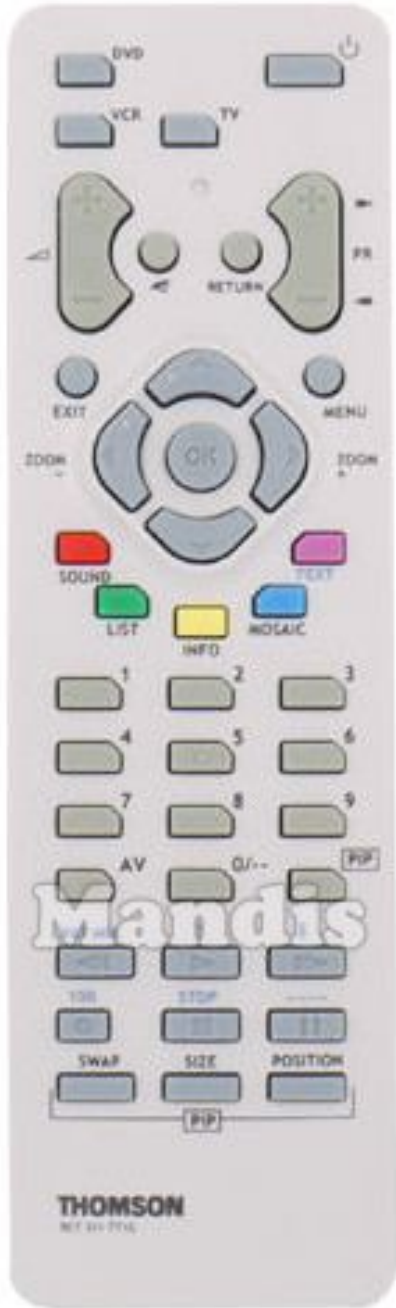

Original	Replacement
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Return	Back / Return
PR+	CH+ / Page+
>>	>>  / Preset+
PR-	CH- / Page-
I<<	I<< / Preset-
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Red	Red / Netflix / Search

Original	Replacement
Sound	Sound / Title
Green	Green / APP / Repeat
List	Shift + Smart / List
Info	Info / Angle
Yellow	Yellow / YouTube / Repeat
Mosaic	Smart / List
Blue	Blue / Prime Video / Random
Violet	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8




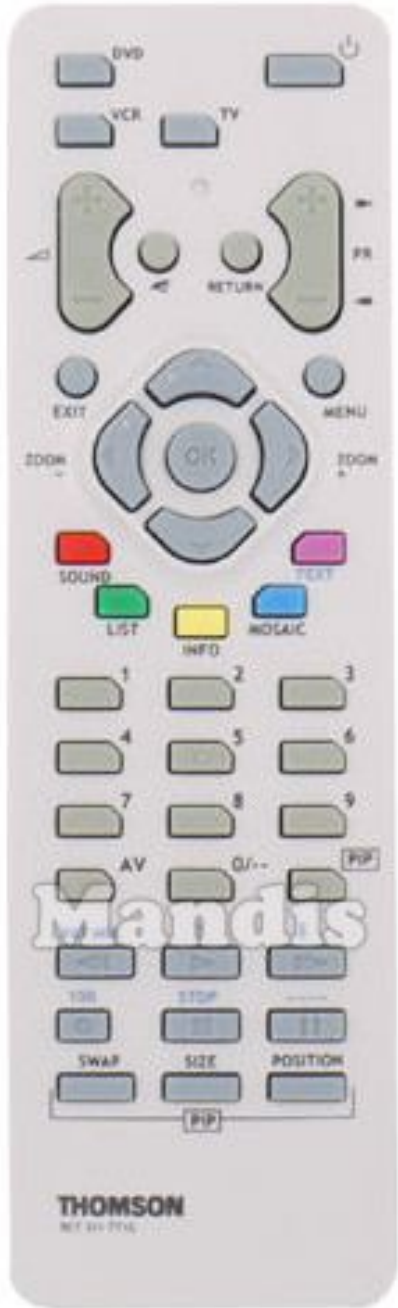







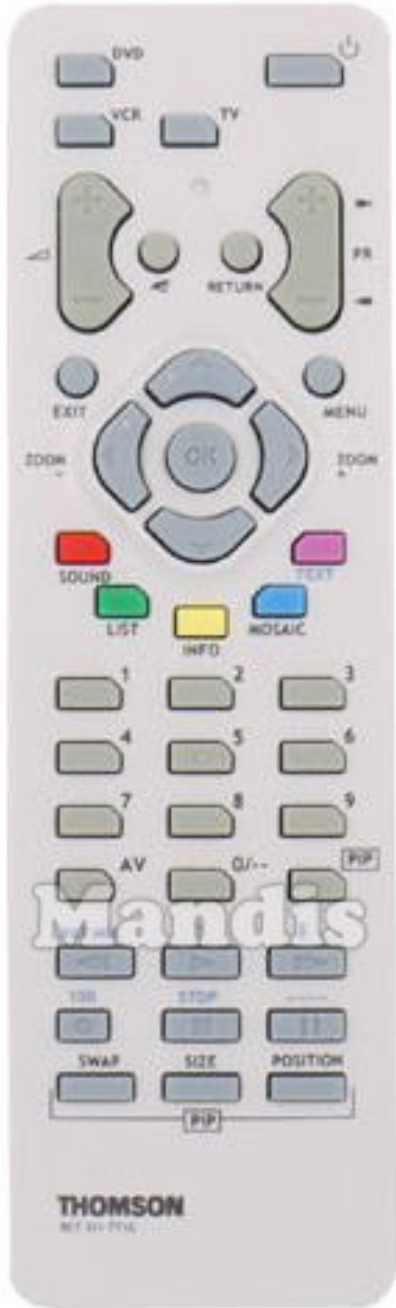



 









 









Original	Replacement
 9	 9
 0/-/-	 0
 AV	 AV / Input / RDS
 PIP	 Zoom / Size
 <</Pat-Mix	 << / Tune-
 Play/?	 Play / Slow
 >>	 >> / Tune+
 Rec/100	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/---	 Pause / Step / Freeze
 Swap PIP	 Setup / OPT /
 Size PIP	 Picture / Format
 Position PIP	 TV/Radio /

Original	Replacement






Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >>  / Preset+
  <<	  << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 List	 Shift + Smart / List
 Green	 Green / APP / Repeat
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Mosaic	 Smart / List
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



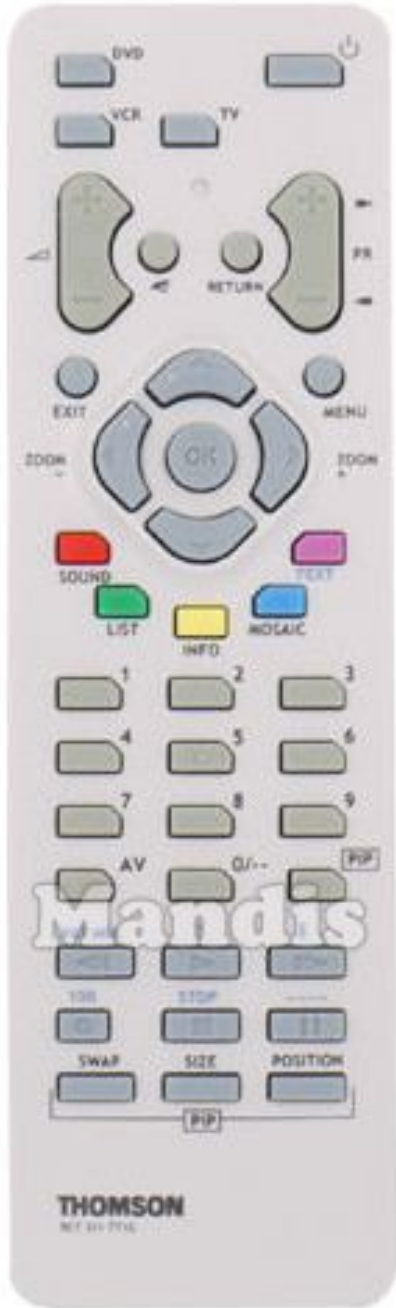

	Original	Replacement	
	9	9	
	0/-/-	0	
	AV	AV / Input / RDS	
	PIP	Zoom / Size	
	<</Pat-Mix	<< / Tune-	
	Play/?	Play / Slow	
	>>	>> / Tune+	
	Rec/100	Rec / Rec Mode	
	Stop	Stop / Hold	
	Pause/---	Pause / Step / Freeze	
	Size PIP	Picture / Format	
	Position PIP	TV/Radio /	

Original	Replacement

