










 
 

 
 

 

 

 










 

 





 

 

 



 



 

 

 









Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Subtitle / EQ
	 Eject / Surround
	 Picture / Format
	 Zoom / Size
	 TV/Radio /
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home

Original	Replacement
	 Up
	 Info / Angle
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4



















 

 

 

 

 

 













 

 





 

 

 





 

 

 





Original	Replacement	Original	Replacement
5	5		
6	6		
7	7		
8	8		
9	9		
Guide	Guide / EPG / -/--		
0	0		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
List	Shift + Smart / List		

Original	Replacement	Original	Replacement





Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Subtitle / EQ
	 Eject / Surround
	 Picture / Format
	 Zoom / Size
	 TV/Radio /
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home

Original	Replacement
	 Up
	 Info / Angle
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4





Original	Replacement	Original	Replacement
5	5		
6	6		
7	7		
8	8		
9	9		
Guide	Guide / EPG / -/--		
0	0		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
List	Shift + Smart / List		

Original	Replacement	Original	Replacement

















 

 

 



 
 


Original	Replacement
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	Subtitle / EQ
	Eject / Surround
	Picture / Format
	Zoom / Size
	TV/Radio /
	Setup / OPT /
	Text / Goto
	AV / Input / RDS
	Menu / Home

Original	Replacement
	Up
	Info / Angle
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4





Original	Replacement	Original	Replacement
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Guide	 Guide / EPG / -/--		
 0	 0		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 List	 Shift + Smart / List		

Original	Replacement	Original	Replacement

