
 

 

 
 

 



 

 

 

 
 
 

 

 



 
 
 
 
 
 
 
 


 
 


 
 


 



 



 

 
 
 

 
 
 
 

 
 



 
 


 







 
 
 

 

 

 

 
 
 
 
 


 
 

 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Tv/AV	 AV	 Return	 Back
 Exit	 Exit	 -/--	 Guide
 Format	 Format	 Vol+	 Vol +
 TDT Menu Tv	 Menu	 Vol-	 Vol -
 Sound	 Dual	 Display	 Shift + Info
 Timer	 Shift + AV	 Sys-Menu	 Smart
 Picture	 Shift + Format	 OK	 Ok
 1	 1	 Up	 Up
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Red/Prog/Tv/Radi	 Red
 8	 8	 Green/Slow/Audio	 Green
 9	 9	 Yellow/REP/Freeze	 Yellow





	Original	Replacement		Original	Replacement
	 Blue/A-B/Subtitle	 Blue		 Nicam/A2	 Media
	 Play/Pause/Hold	 Play			
	 Stop/Size	 Stop			
	 <</Language	 <<			
	 >>/Text	 >>			
	 I<</FAV	 I<<			
	 >>I/EPG	 >>I			
	 Eject/Index	 Rec			
	 Goto/Subpage	 Pre Ch			
	 Title/Info	 Info			
	 Mute	 Mute			
	 ANG/Exit/Reveal	 +  Shift + Exit			
	 SUBT	 Subt			
	 Zoom/	 3D			
	 Lang/TDTProg-	 Sleep			
	 Menu/TvFormat/Cancel	 TV/R			
	 Set/TDT-Menu/Tv/	 Text			



TXT