

 



























 








| Original | Replacement |
|--|--|
|  Power |  Power |
|  Open / Close |  Eject / Surround |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide / EPG / -/-- |
|  Step |  Shift + Pause / Step / |
|  Slow |  Shift + Play / |
|  Zoom |  Zoom / Size |
|  Angle |  Info / Angle |

| Original | Replacement |
|--|---|
|  Prog |  TV/Radio / |
|  Shuffle |  Blue / Prime Video / Random |
|  Video |  Smart / List |
|  Repeat |  Green / APP / Repeat |
|  Repeat A-B |  Yellow / YouTube / Repeat |
|  Title |  Sound / Title |
|  PBC |  Picture / Format |
|  Goto |  Text / Goto |
|  L/R |  D.Menu / Top |
|  Subtitle |  Subtitle / EQ |
|  Setup |  Setup / OPT / |
|  Up |  Up |
|  Display |  Display / Media |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |





| | Original | Replacement | Original | Replacement |
|--|--|---|----------|-------------|
| |  Down |  Down | | |
| |  Return |  Back / Return | | |
| |  Vol+ |  Vol+ | | |
| |  Mute |  Mute / Dimmer | | |
| |  << |  << / Tune- | | |
| |  >> |  >> / Tune+ | | |
| |  Stop |  Stop / Hold | | |
| |  Vol- |  Vol- | | |
| |  Audio |  Audio / Lang I/II | | |
| |  I<< |  I<< / Preset- | | |
| |  >>I |  >>I / Preset+ | | |
| |  Play / Pause |  Play / Slow | | |
| |  Play / Pause |  Pause / Step / Freeze | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

