
 




 

 



 

 













 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red / Open/Close	 Red / Netflix / Search
 Red / Open/Close	 Eject / Surround
 Green / Title	 Green / APP / Repeat
 Green / Title	 Sound / Title
 Yellow / DVD	 Yellow / YouTube / Repeat
 Yellow / DVD	 Setup / OPT /
 Blue / A-B	 Blue / Prime Video / Random
 Blue / A-B	 Shift + Yellow / YouTube / YouTube /
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Angle	 Shift + Info / Angle
 Back / Text	 Back / Return
 Back / Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 Menu / Info	 Info / Angle
 Menu	 Menu / Home
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/-
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 FAV	 Fav / Marker / PC





Original	Replacement	Original	Replacement
CH +	CH+ / Page+	Recall / GOTO	Shift + Text /
Vol -	Vol-		
Rec / REP	Rec / Rec Mode		
Rec / REP	Shift + Green / APP /		
CH -	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Audio	Audio / Lang I/II		
0	0		
Recall / GOTO	Smart / List		

