















































 



 
 


















Original	Replacement	Original	Replacement
	Power		Power
	i		Info / Angle
	Analog Menu		Menu / Home
	Digital Menu		D.Menu / Top
	1		1
	2		2
	3		3
	Input Select		AV / Input / RDS
	4		4
	5		5
	6		6
	ATV/DTV		Smart / List
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/-
	Timer		Sleep / Timer
	0		0
	Mute		Mute / Dimmer
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Enter/CH List		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-
	TV/Radio		TV/Radio /
	[=]		Text / Goto
	[≡o] [≡o]/P↔P		Fav / Marker / PC
	Picture Size		Picture / Format
	[...]		Subtitle / EQ



