

 

 

 

 

 

 



 







 



 



 



 






 








 



 















Original	Replacement	Original	Replacement
 Input	 AV / Input / RDS	 ATV/DTV	 Smart / List
 Power	 Power	 Vol+	 Vol+
 3D	 Setup / OPT /	 [≡i]/[i+ ]	 Info / Angle
 Text	 Text / Goto	 P+	 CH+ / Page+
 Subtitle	 Subtitle / EQ	 Vol-	 Vol-
 O)/I/II	 Audio / Lang I/II	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Quick	 Display / Media
 3	 3	 Guide	 Guide / EPG / -/--
 4	 4	 Up	 Up
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Menu	 Menu / Home
 AD	 Sound / Title	 Down	 Down
 0	 0	 Return	 Back / Return





Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡?]	 Play / Slow
 [≡□]	 Stop / Hold
 [≡↕]	 Zoom / Size
 [⊖] / [≡X]	 Pause / Step / Freeze

Original	Replacement

