






Original	Replacement	Original	Replacement
	Standby		Power
	Auto		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Vol+		Vol+
	Vol-		Vol-
	Aspect		Shift + Picture / Format
	Nicam		Audio / Lang I/II
	Display		Display / Media
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	LCD Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	PMode		Picture / Format
	SMode		Sound / Title
	Sleep		Sleep / Timer
	Fav		Fav / Marker / PC





	Original	Replacement	Original	Replacement
	 Fav-	 I<< / Preset-		
	 EPG	 Guide / EPG / -/--		
	 Text	 Text / Goto		
	 Fav+	 >>I / Preset+		
	 Hold	 Stop / Hold		
	 Lang	 Shift + Audio / Lang I/II		
	 Subtitle	 Subtitle / EQ		
	 Index	 Info / Angle		
	 Size	 Zoom / Size		
	 Reveal	 TV/Radio /		
	 Subpage	 Eject / Surround		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		

