



Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Menu	 Menu / Home
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 FAV	 Fav / Marker / PC
 -/--	 Shift + Guide / EPG / -/--	 P.Mode	 Picture / Format
 Recall	 Back / Return	 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Audio	 Audio / Lang I/II	 CH-	 CH- / Page-
 Aspect	 Shift + Picture / Format	 Red	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Menu	 Menu / Home
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 FAV	 Fav / Marker / PC
 -/--	 Shift + Guide / EPG / -/--	 P.Mode	 Picture / Format
 Recall	 Back / Return	 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Audio	 Audio / Lang I/II	 CH-	 CH- / Page-
 Aspect	 Shift + Picture / Format	 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		Index D.Menu / Top
	Yellow Yellow / YouTube / Repeat		Tv/Radio TV/Radio /
	Blue Blue / Prime Video / Random		Mix Smart / List
	Home Shift + Home / Menu /		Sub-T Subtitle / EQ
	Setup Setup / OPT /		
	Mouse Display / Media		
	Browser Guide / EPG / -/--		
	Text Text / Goto		
	Stop Stop / Hold		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	<</Hold << / Tune-		
	>>/Subpage >> / Tune+		
	I<< I<< / Preset-		
	>>I/Cancel >>I / Preset+		
	Reveal Rec / Rec Mode		
	Size Zoom / Size		

