



 

 
 

 


 

 




 













Original	Replacement
	 Power
	 Mute / Dimmer
	 Info / Angle
	 Shift + Info / Angle
	 Picture / Format
	 Zoom / Size
	 Smart / List
	 Sound / Title
	 Setup / OPT /
	 Menu / Home
	 1
	 2
	 3
	 4
	 5
	 6
	 7

Original	Replacement
	 8
	 9
	 Sleep / Timer
	 0
	 Shift + Text /
	 Rec / Rec Mode
	 Stop / Hold
	 Subtitle / EQ
	 Audio / Lang I/II
	 << / Tune-
	 >> / Tune+
	 Shift + Yellow / YouTube /
	 Shift + Green / APP /
	 >>I / Preset+
	 Vol+
	 Play / Slow
	 Vol-





Original		Replacement		Original	Replacement
	I<</Prev		I<< / Preset-		
	Home		D.Menu / Top		
	Up		Up		
	X/Return		Back / Return		
	Left		Left		
	Enter		OK		
	Right		Right		
	Select		Fav / Marker / PC		
	Down		Down		
	Wuaki TV		Display / Media		
	Red		Red / Netflix / Search		
	Green/EPG		Green / APP / Repeat		
	Green/EPG		Guide / EPG / -/--		
	Yellow/TTX		Yellow / YouTube / Repeat		
	Yellow/TTX		Text / Goto		
	Blue		Blue / Prime Video / Random		

