



Original	Replacement
	 Mute / Dimmer
	 Zoom / Size
	 Power
	 Info / Angle
	 Picture / Format
	 Sound / Title
	 Pause / Step / Freeze
	 Sleep / Timer
	 Shift + D.Menu / Top Menu
	 Shift + Info / Angle
	 Shift + YouTube / YouTube / Repeat A-B
	 Vol-
	 Vol+
	 CH- / Page-
	 CH+ / Page+
	 Menu / Home
	 Up

Original	Replacement
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 D.Menu / Top
	 Down
	 Exit / Cancel / Clear
	 Guide / EPG / -/-
	 << / Tune-
	 >> / Tune+
	 Rec / Rec Mode
	 Text / Goto
	 Play / Slow
	 Stop / Hold
	 Shift + Down
	 I<< / Preset-
	 >>I / Preset+





Original	Replacement	Original	Replacement
	+/Goto	+	Shift + Up
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green/Mode		Green / APP / Repeat
	Yellow/Zoom		Yellow / YouTube / Repeat
	Blue/Schedule		Blue / Prime Video / Random

Original	Replacement

