


Original	Replacement
 Display	 Display / Media
 P/N	 Smart / List
 Mute	 Mute / Dimmer
 Eject	 Eject / Surround
 Prog	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Search	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 Subtitle	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle

Original	Replacement
 0	 0
 10+	 Guide / EPG / -/-
 PBC	 AV / Input / RDS
 Setup	 Setup / OPT /
 Up	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 Title	 Sound / Title
 Down	 Down
 Menu	 Menu / Home
 Channel	 D.Menu / Top
 Language	 Audio / Lang I/II
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 Mark	 Fav / Marker / PC

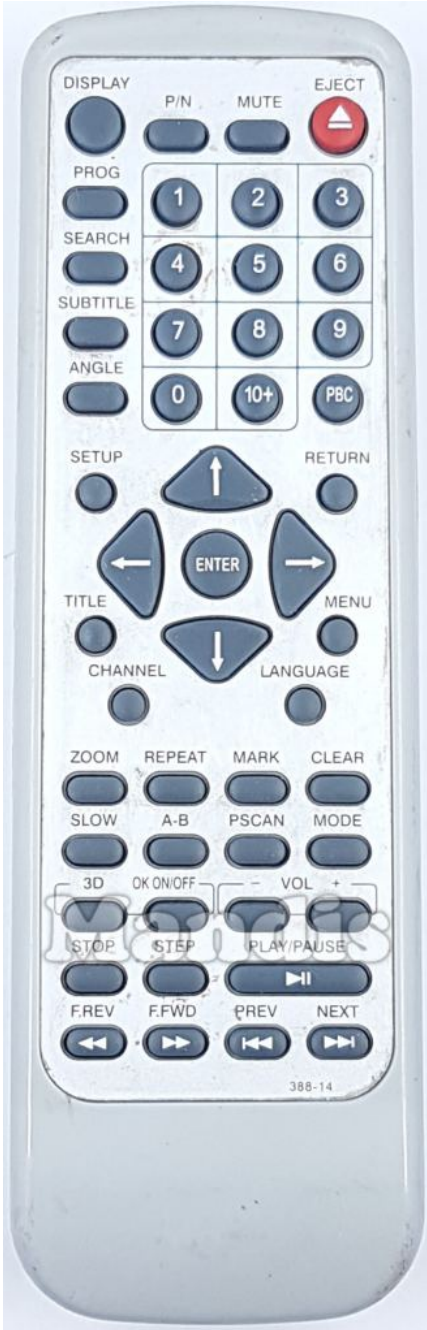



	Original	Replacement	
	Clear	Exit / Cancel / Clear	
	Slow	Shift + Play /	
	A-B	Yellow / YouTube / Repeat	
	PScan	Text / Goto	
	Mode	Blue / Prime Video / Random	
	3D	Picture / Format	
	OK On/Off	Power	
	Vol-	Vol-	
	Vol+	Vol+	
	Stop	Stop / Hold	
	Step	Shift + Pause / Step /	
	Play	Play / Slow	
	Pause	Pause / Step / Freeze	
	<</F.REV	<< / Tune-	
	>>/F.FWD	>> / Tune+	
	I<</Prev	I<< / Preset-	
	>>I/Next	>>I / Preset+	

Original	Replacement

