 














 





Original	Replacement
 Power	 Power
 Tv/AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Back	 Back / Return
 Vol+	 Vol+
 Scan	 Smart / List
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Zoom	 Zoom / Size
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Mute	 Mute / Dimmer
 Red / Picture	 Red / Netflix / Search
 Red / Picture	 Picture / Format
 Green / Sound	 Green / APP / Repeat
 Green / Sound	 Sound / Title
 Yellow / Sleep	 Yellow / YouTube / Repeat
 Yellow / Sleep	 Sleep / Timer
 Blue / Call	 Blue / Prime Video / Random





	Original	Replacement	
	Text	Text / Goto	
	Mix	Shift + Text /	
	Size	Shift + Zoom /	
	Index	Rec / Rec Mode	
	Hold	Stop / Hold	
	Reveal	Play / Slow	
	Subpage	Subtitle / EQ	
	Cancel	Exit / Cancel / Clear	
	DVB Menu	D.Menu / Top	
	i	Info / Angle	
	EPG	Guide / EPG / -/--	
	ESC	Fav / Marker / PC	
	DVB	Display / Media	
	Freeze	Pause / Step / Freeze	
	I/II	Audio / Lang I/II	

	Original	Replacement	

