



Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute / Dimmer
	Tv/AV		AV / Input / RDS		Vol-		Vol-
	1		1		Up		Up
	2		2		CH+		CH+ / Page+
	3		3		Vol+		Vol+
	Eject		Eject / Surround		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Sys Menu		D.Menu / Top
	Play/Pause		Play / Slow		CH-		CH- / Page-
	7		7		Down		Down
	8		8		Display		Display / Media
	9		9		Picture		Picture / Format
	Stop		Stop / Hold		Sound		Sound / Title
	0		0		Timer		Sleep / Timer
	-/--		Shift + Guide / EPG / -/--		Nicam/A2		Audio / Lang I/II
	Return		Back / Return		Lan/Prog-		Shift + CH- / Page-





Original	Replacement
Zoom/Prog+	Shift + CH+ /
Sub	Subtitle / EQ
Goto	Text / Goto
SET/Tv/TXT/DVB-	Setup / OPT /
Menu/Cancel/Tv Format	Menu / Home
ANG/Reveal/Exit	Exit / Cancel / Clear
Title/info	Shift + Sound / Title
<</Hold/Languag	<< / Tune-
>>/Size/Text	>> / Tune+
I<</Subpage	I<< / Preset-
FAV	Fav / Marker / PC
>>I/Index	>>I / Preset+
EPG	Guide / EPG / -/--
Red/Pro	Red / Netflix / Search
Tv/Radio	TV/Radio /
Green/Slow/Audio	Green / APP / Repeat
Yellow/Rep/Freeze	Yellow / YouTube / Repeat

Original	Replacement
Blue/A-B/Subtitle	Blue / Prime Video / Random

