 



 



 
 

 


 







 

 











Original	Replacement
 Power	 Power
 Menu	 Menu
 Title	 List
 Setup	 Options
 Angle	 Red
 Repeat	 Text
 A-B Repeat	 TV/R
 Slow	 Pre Ch
 File Info	 Info
 Time Search	 AV
 Brt. Cont.	 Green
 Media Type	 Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok

Original	Replacement
 Main Page	 Smart
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Video	 Yellow
 Audio	 Dual
 Subtitle	 Subt
 Scr Size	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2





	Original	Replacement	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Exit

Original	Replacement

