

 

 

 
 
 
 










 



 



 



 


 
 



 







 

 



 



 













Original	Replacement	Original	Replacement
 Power	 Power	 Play	 Play
 1	 1	 Pause	 Pause
 2	 2	 Stop	 Stop
 3	 3	 Menu	 Menu
 Eject	 Eject	 Disc/USB	 Red
 4	 4	 Dock/Tuner	 Green
 5	 5	 Setup	 Options
 6	 6	 Mute	 Mute
 7	 7	 Title	 Info
 8	 8	 Enter	 Ok
 9	 9	 Up/Slow	 Up
 0	 0	 Down/Angle	 Down
 Goto	 Guide	 Right	 Right
 Input	 AV	 >>I	 >>I
 Prog	 Sleep	 Left	 Left
 Vol+	 Vol +	 I<<	 I<<
 Vol-	 Vol -	 Sleep/Timer	 Smart



